Home Decorators

Collection

HDC# 08041 MFG# TW-18499IY / TW-18499BP
SOUTHPORT 5 SHELF BOOK CASE 60" W/GLASS DRS

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

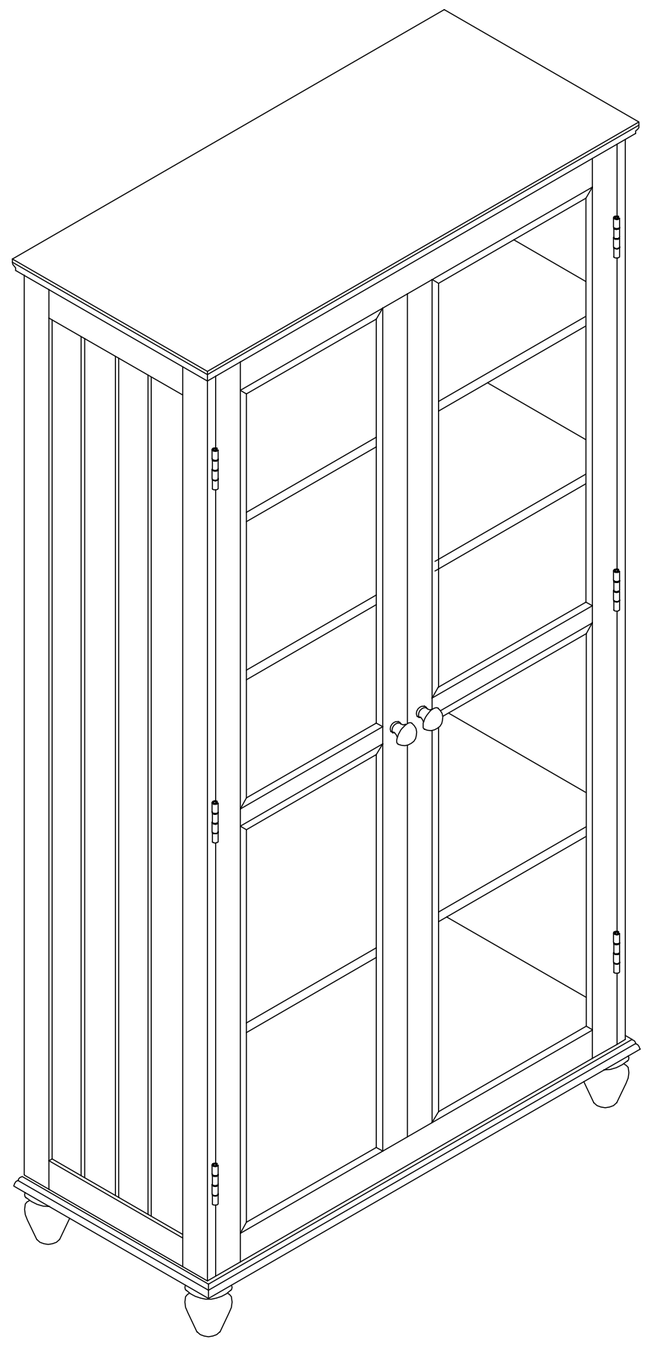

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

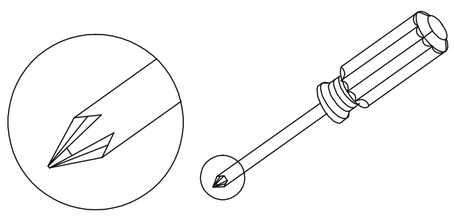

"+"Screw driver

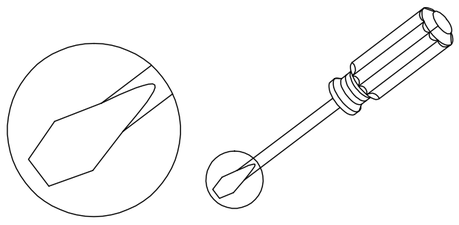

"-"Screw driver

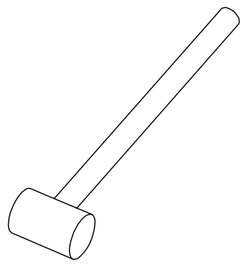

Rubber Mallet

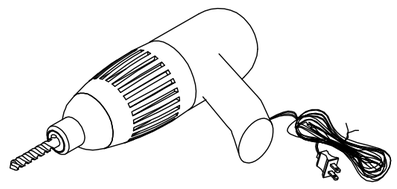

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.

(2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.

DO NOT USE HAMMER

(3) WIPE AWAY EXCESS GLUE.

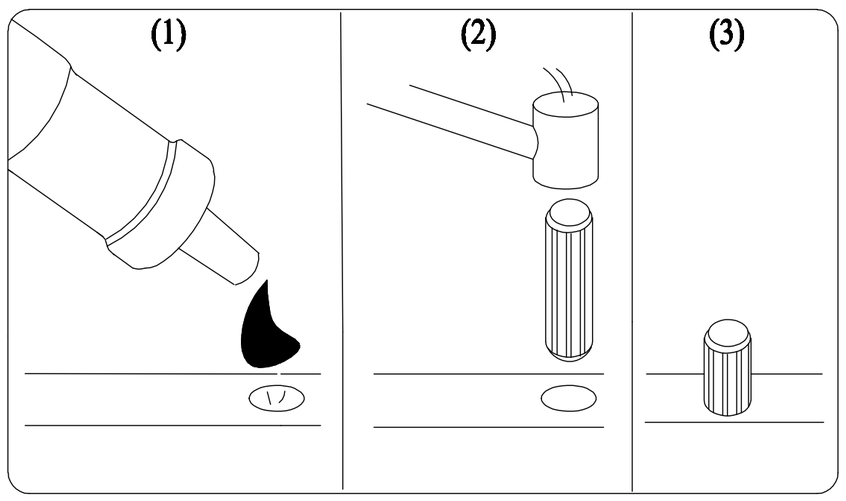

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: "+"SCREW DRIVER
STEP 1: SCREW CAM BOLT(A) ONTO PRE-SET PLASTIC NUT ON PANEL.USE A "+" SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVERTIGHTEN THE CAM BOLT(A)
STEP 2:ATTACH BOTH PANELS,MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY,CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK(C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK(C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT(A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK(C) TO THE VERY DEPTH OF THE HOLE.
STEP 3:ROTATE THE CAM-LOCK(C) CLOCK WISE TO SECURE CAM-BOLT(A) TIGHTEN BY A "+" SCREWDRIVER
DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION

(1)

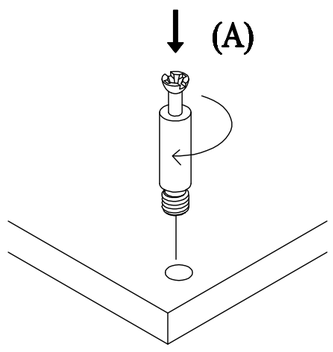

(2)

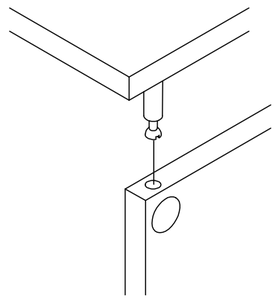

(3)

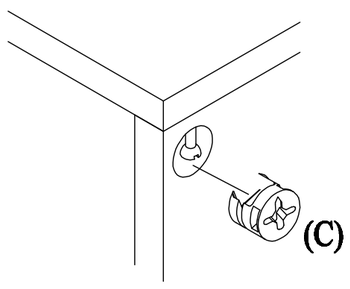

(4)

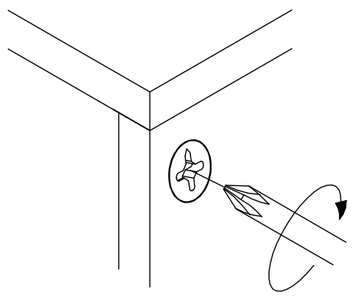

(5)

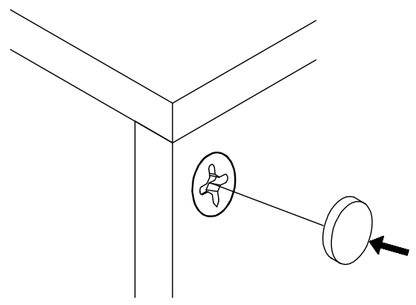

HORIZONTAL CONNECTION

(1)

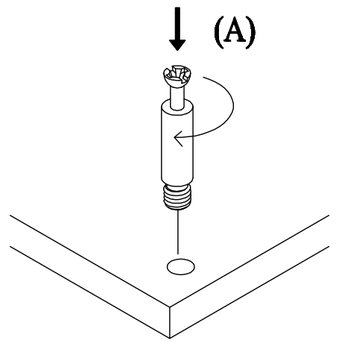

(2)

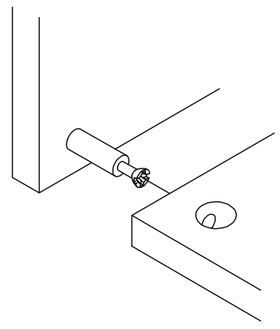

(3)

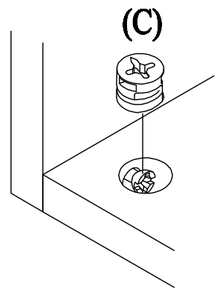

(4)

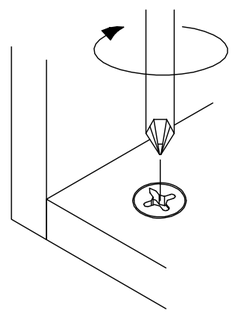

(5)

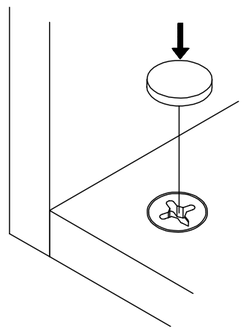

PARTS LIST

BOTTOM PANEL
1 PC

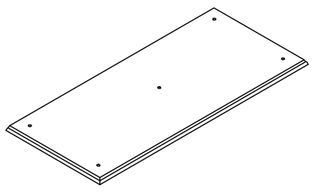

A

LEG
4 PCS



B

LEFT SIDE PANEL 1 PC



C

RIGHT SIDE PANEL 1 PC



D

SHELF
1 PC

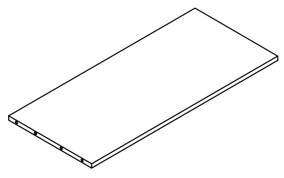

E

TOP PANEL
1 PC

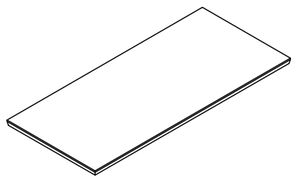

F

LEFT DOOR
1 PC



G

RIGHT DOOR
1 PC



H

SHELF
3 PCS

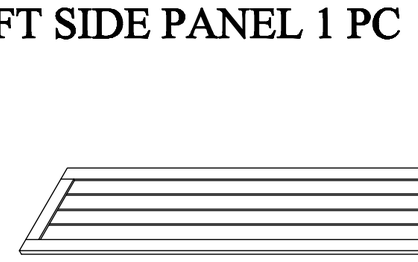

I

BACK PANEL
1 PC

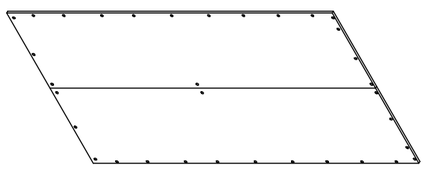

J

LEG
1 PC



K

HARDWARE LIST

WOOD DOWEL 12 PCS  (1)	CAM BOLT CAM-LOCK 12 SETS  (2)	HINGE FLAT HEAD SCREW 6 SETS 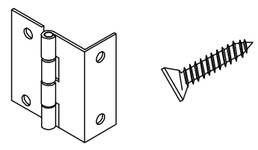 (3)	IRON SLICE FLAT HEAD SCREW 2 SETS (4)	KNOB ROUND HEAD BOLT 2 SETS  (5)
MAGNET LOCK ROUND HEAD SCREW 1 SET 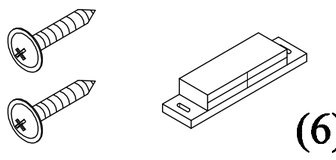 (6)	ROUND HEAD SCREW 30 PCS  (7)	SHELF HOLDER FLAT HEAD SCREW 12 SETS 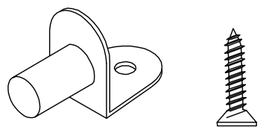 (8)	TILTING PREVENT HARDWARE 2 SETS 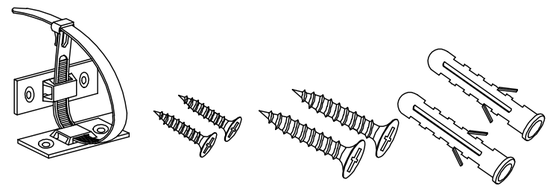 (9)	
VELVET HOLE COVER 8 PCS (10)	GLUE 1 PC 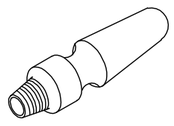 (11)			

STEP 1: ASSEMBLE LEG (B & K)

- ASSEMBLE LEG (B & K) ON BOTTOM PANEL (A).

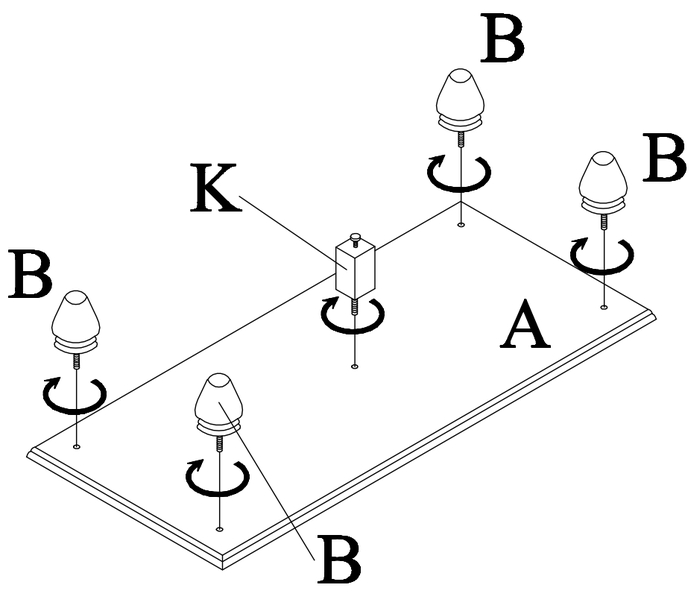

STEP 2: ASSEMBLE SIDE PANEL (C & D) AND SHELF (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) TO ASSEMBLE SIDE PANEL (C & D) AND SHELF (E) TOGETHER.

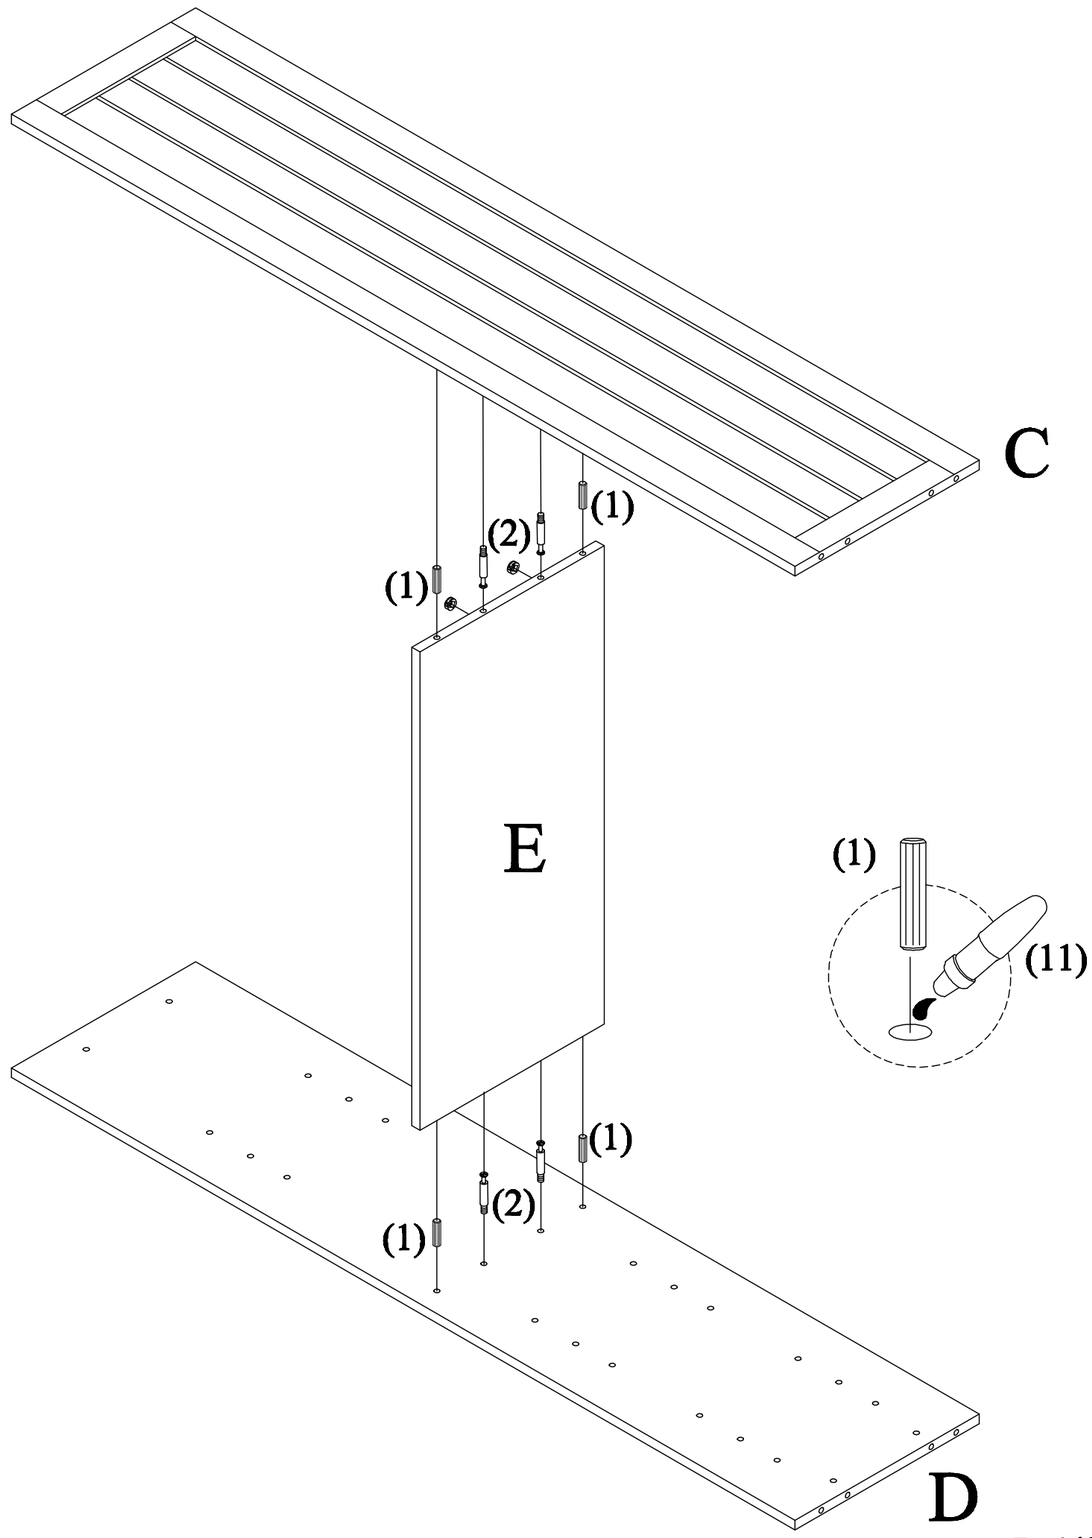

STEP 3: ASSEMBLE TOP PANEL (F) AND BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) TO ASSEMBLE SIDE PANEL (C & D), TOP PANEL (F) AND BOTTOM PANEL (A) TOGETHER.
- USE THE VELVET HOLE COVER (10) TO COVER THE CAM-LOCK HOLES AS SHOWN.

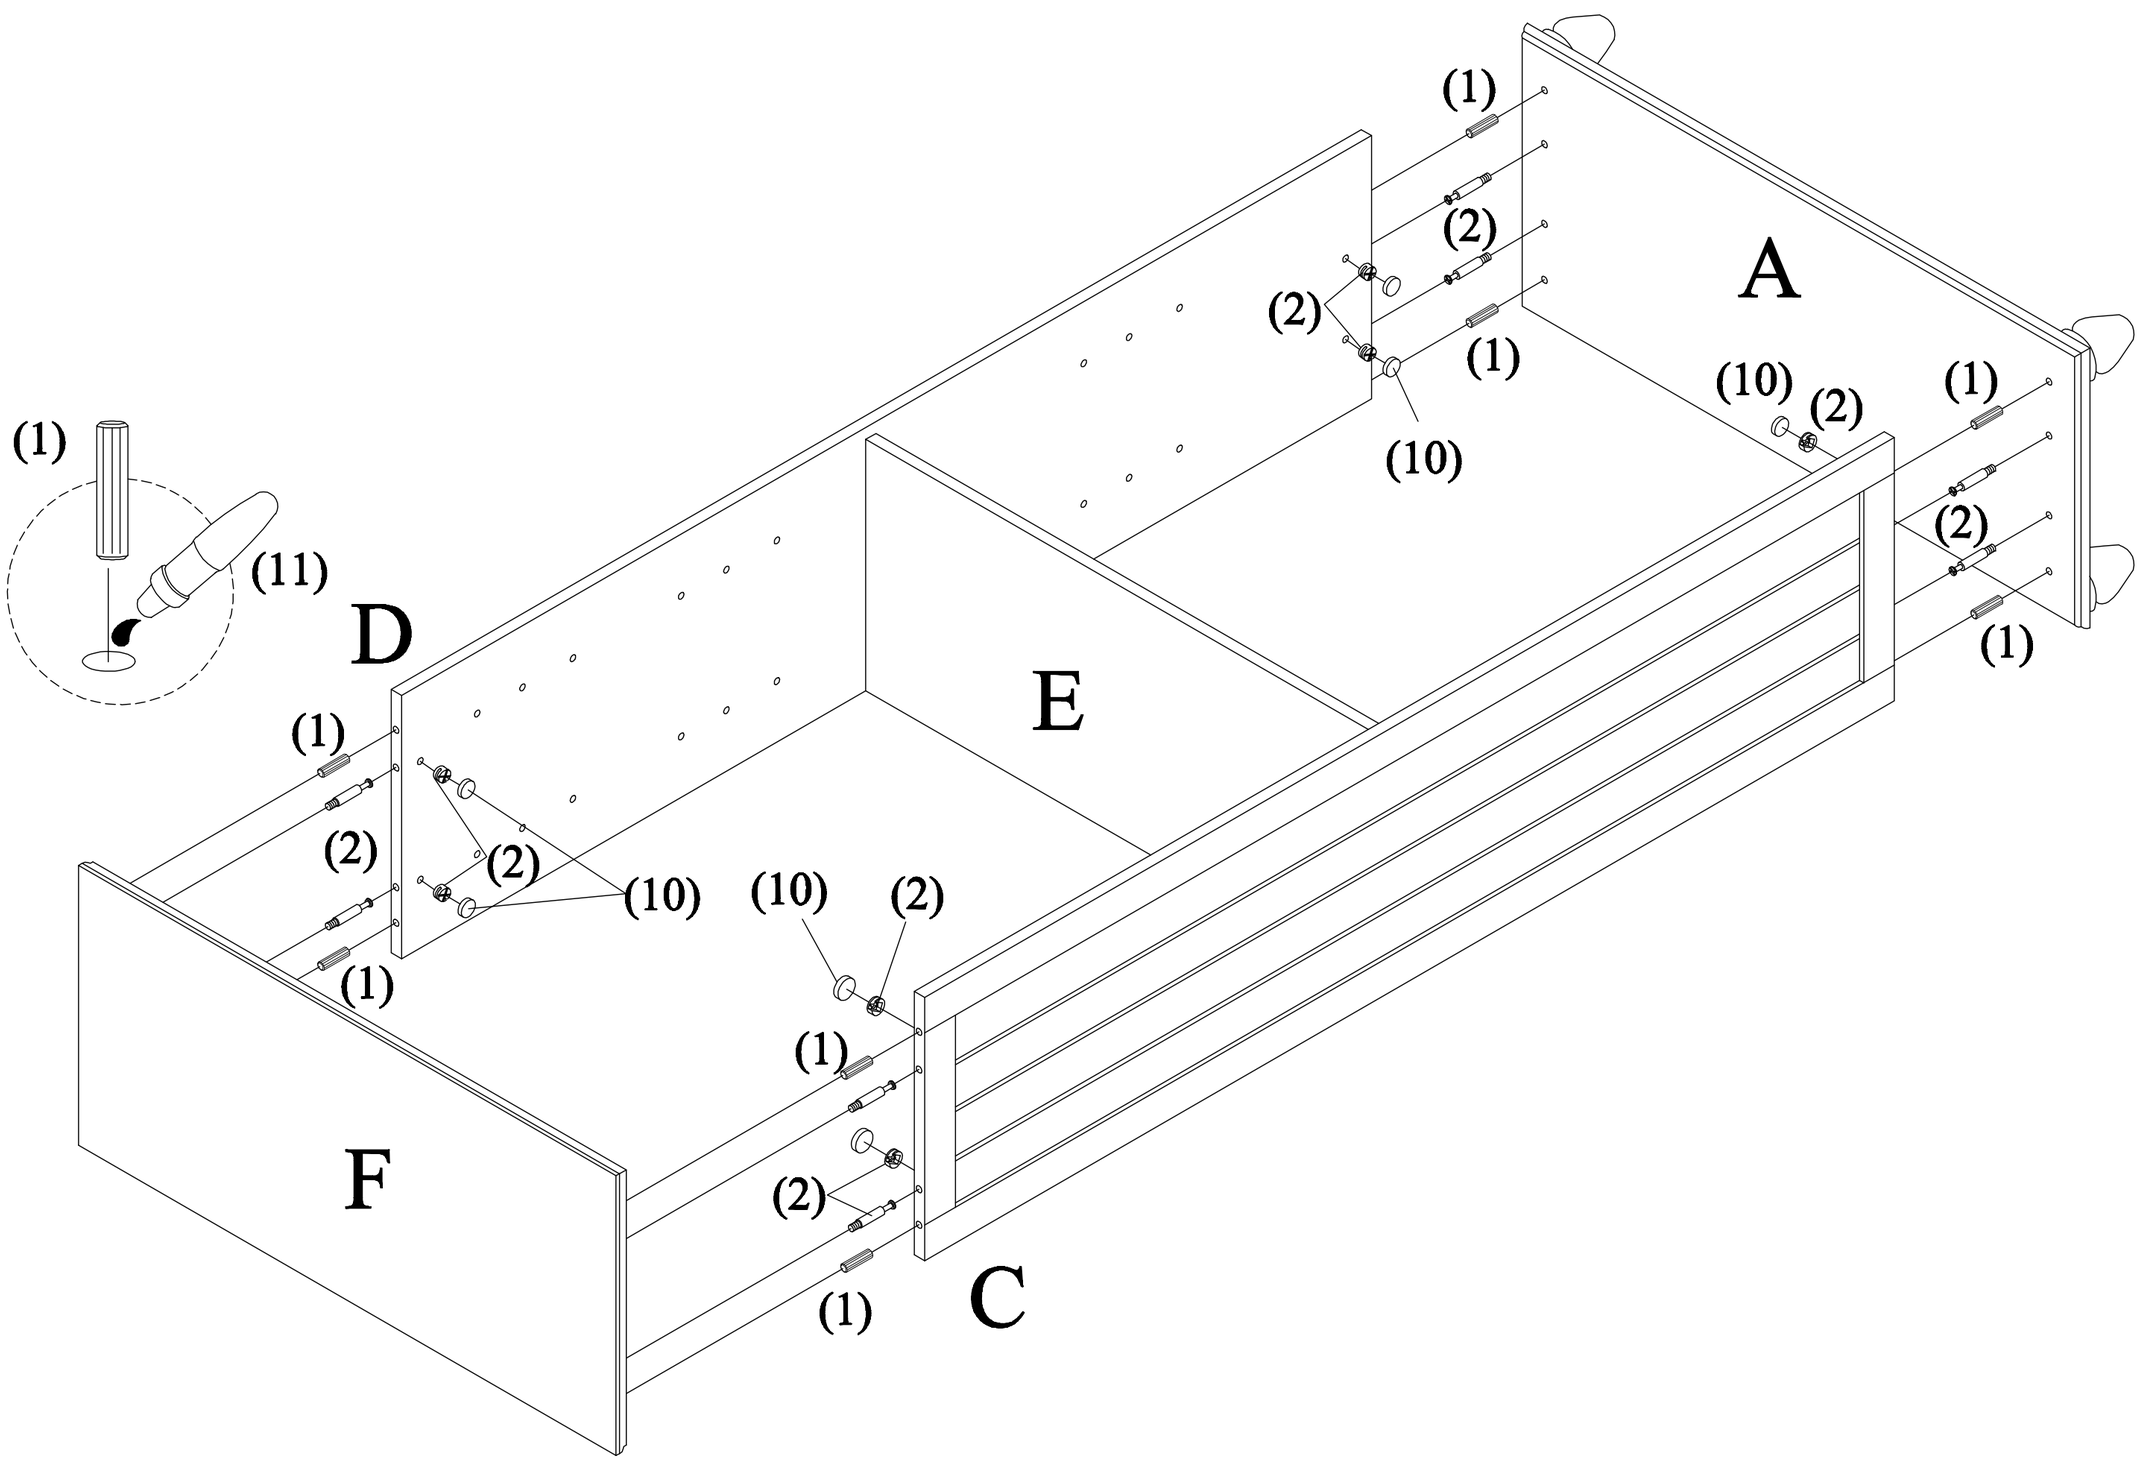

STEP 4: ASSEMBLE DOOR (G & H)

- USE FLAT HEAD SCREW (3) TO ATTACH HINGE (3) ONTO SIDE PANEL (C & D) AND DOOR (G & H) TOGETHER.
- USE FLAT HEAD SCREW (4) TO ATTACH IRON SLICE (4) ONTO DOOR (G & H).
- USE ROUND HEAD BOLT (5) TO ATTACH KNOB (5) ONTO DOOR (G & H).
- USE ROUND HEAD SCREW (6) TO ATTACH MAGNET LOCK (6) ON THE BOTTOM OF TOP PANEL (F).

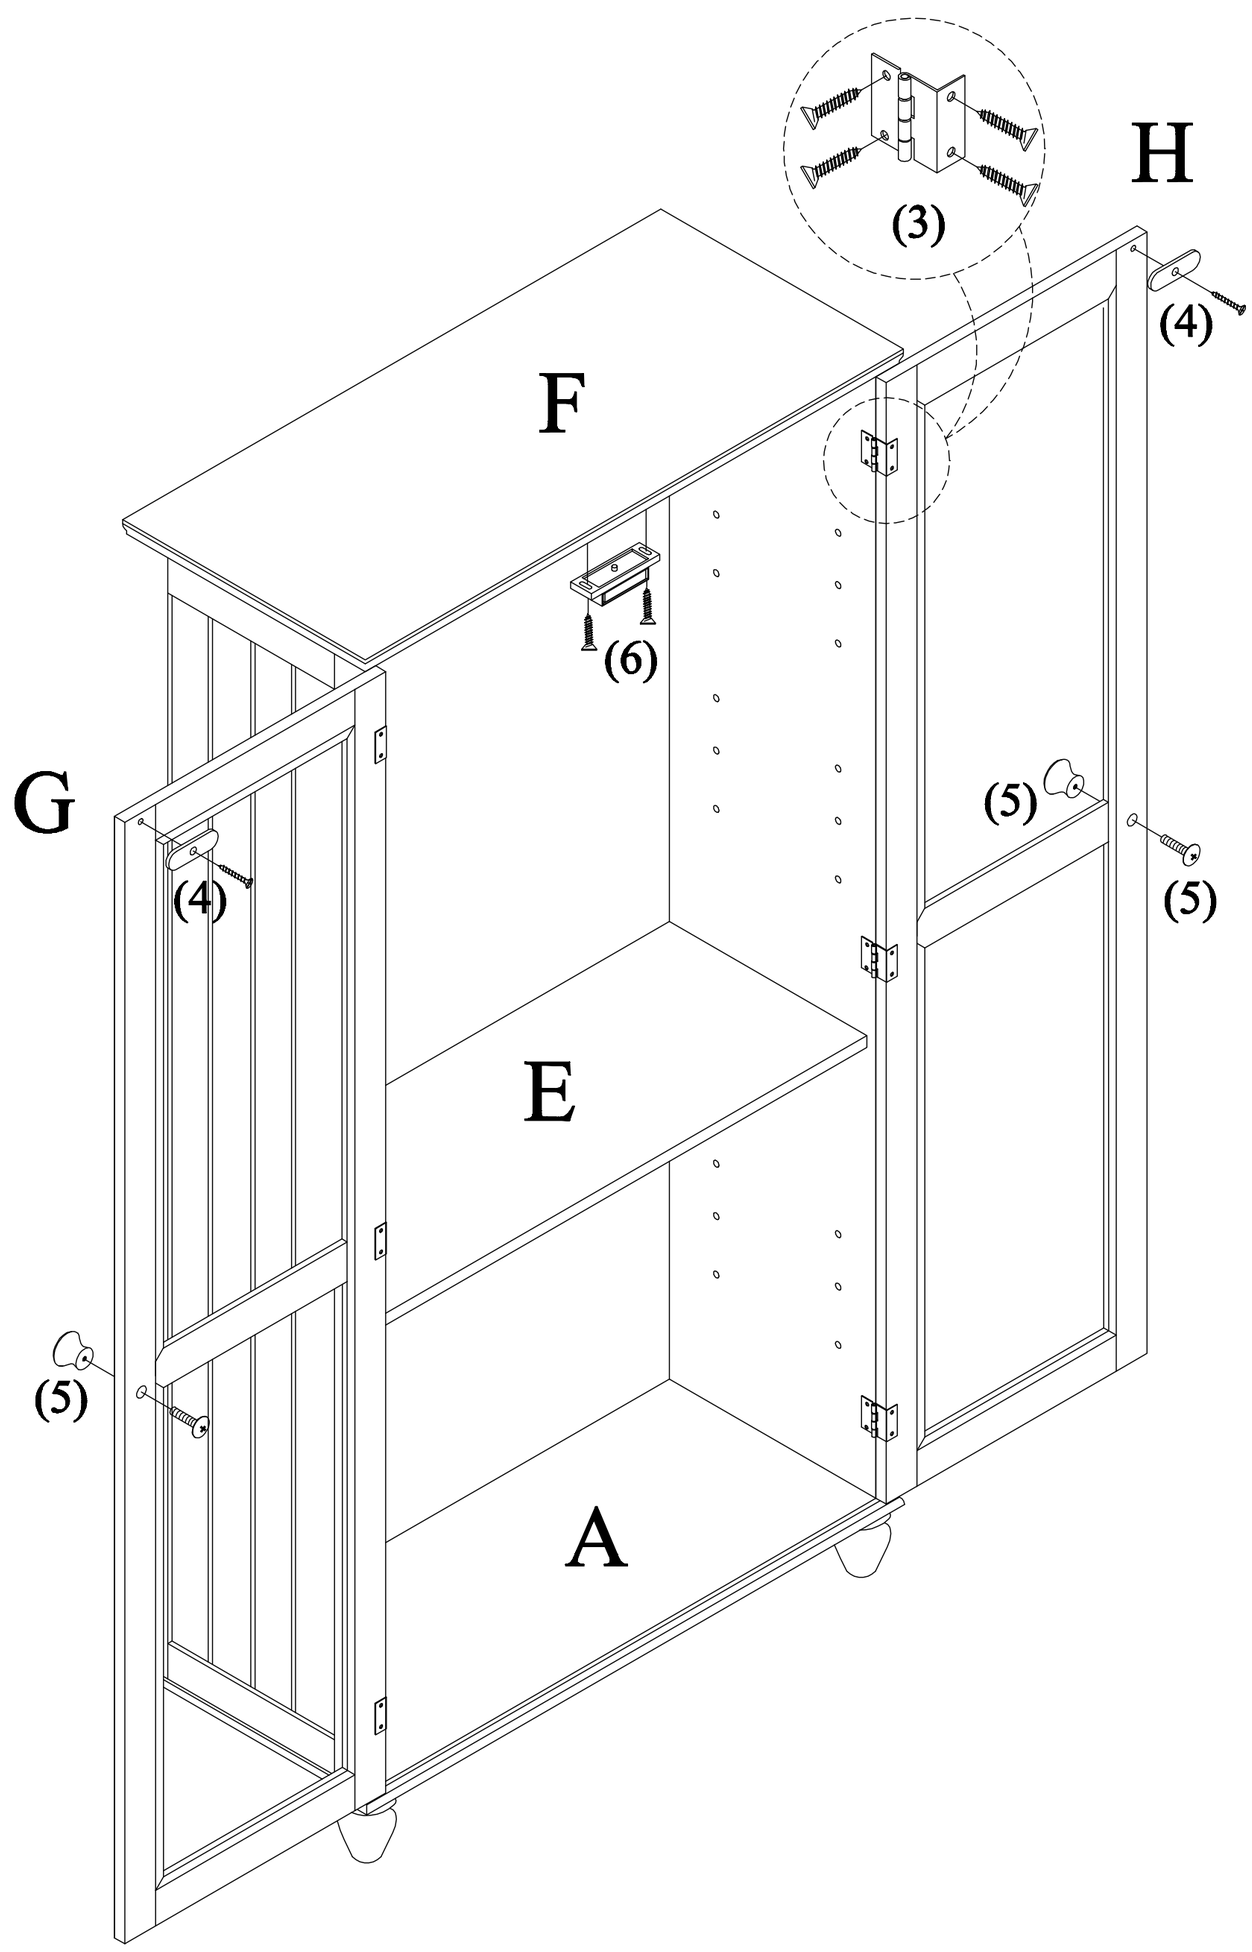

STEP 5: <u>ASSEMBLE BACK PANEL (J) AND SHELF (I)</u>

- USE ROUND HEAD SCREW (7) TO ATTACH BACK PANEL (J) ON THE BACK OF PRE-ASSEMBLED UNIT.
- INSERT SHELF HOLDERS (8) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (C & D), THEN USE FLAT HEAD SCREW (8) TO FIX THE SHELF (I) AND SHELF HOLDER (8).

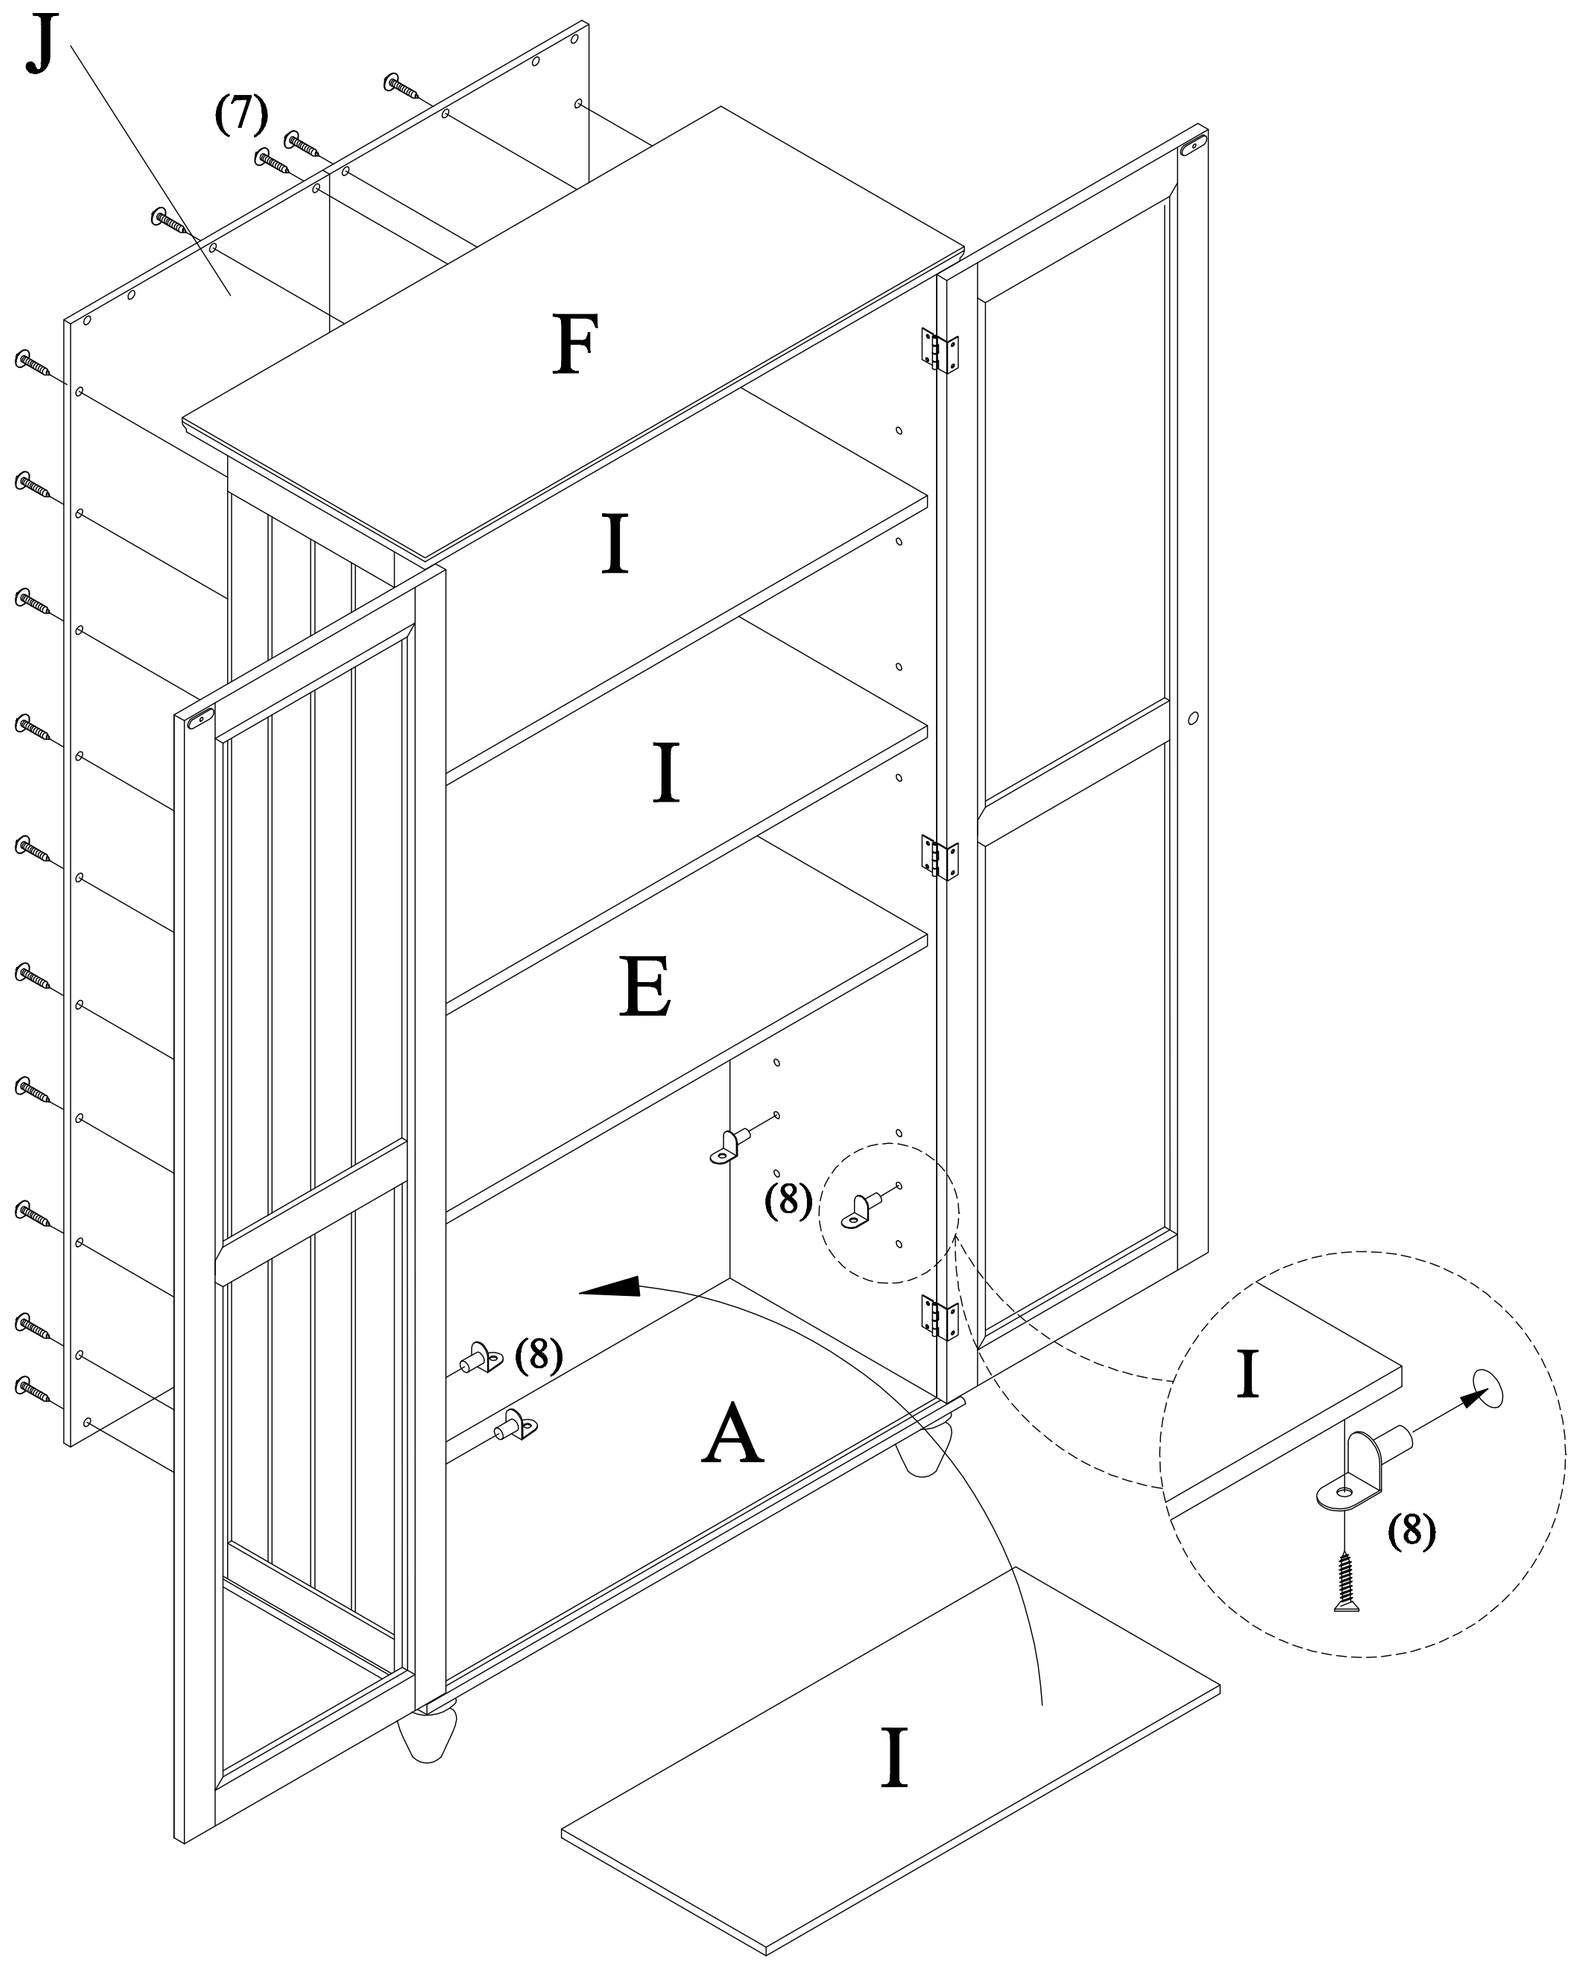

NOTE:BEFORE YOU ASSEMBLE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS EVENLY SPACED,THEN ATTACH BACK PANEL.

STEP 6: ASSEMBLE PREVENT DEVICE (9)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 2 GECKOS INTO THE 2 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL, THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.